

Inspection chamber

Function:

The inspection chamber reliably retains coarse dirt on green roofs, preventing it from accumulating at the drain. Avoids larger dirt deposits while ensuring full drain functionality. The chamber cover can be removed for inspection purposes.

Installation:

The inspection chamber is placed centrally on the drainage point above the drain. The drain grate is then inserted into the opening and clamped into place. Following this, the chamber cover is placed on top. Gravel is then pushed against the inspection chamber on all sides to fix it into place and provide a filter layer in front of the green roof substrate. Do not fill the substrate directly against the inspection chamber.

Material:

PVC Light grey, low-temperature impact resistant plastic, weatherproof

Delivery unit:

 
 
 
 
Inspection chamber; welded design with matching chamber cover, ready to install, without drain grate

Versions:

Universal size; different dimensions available on request

Package units:

Supplied in cartons, PU 1 unit

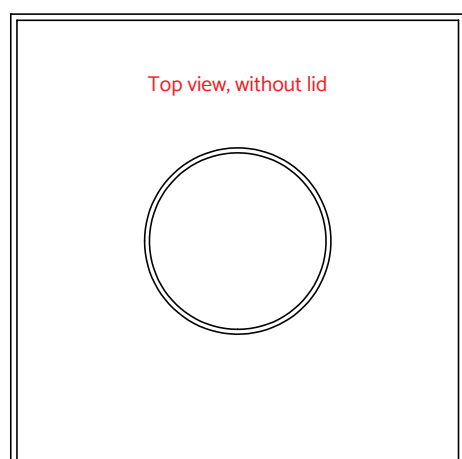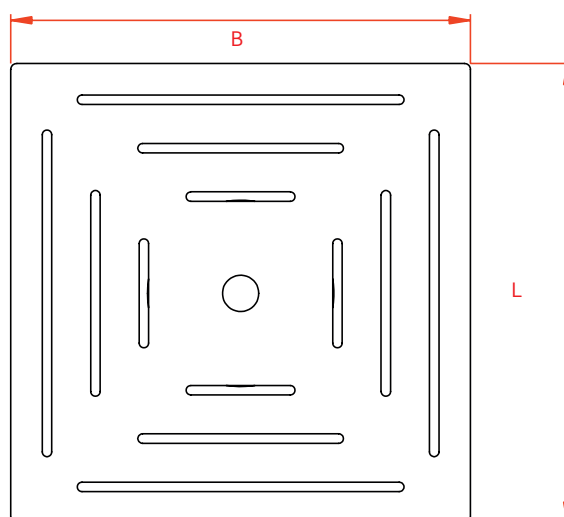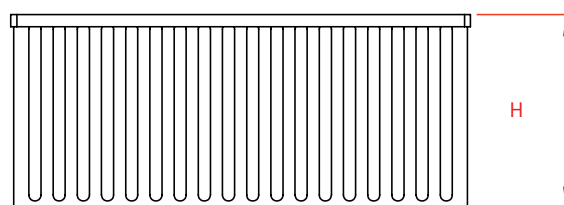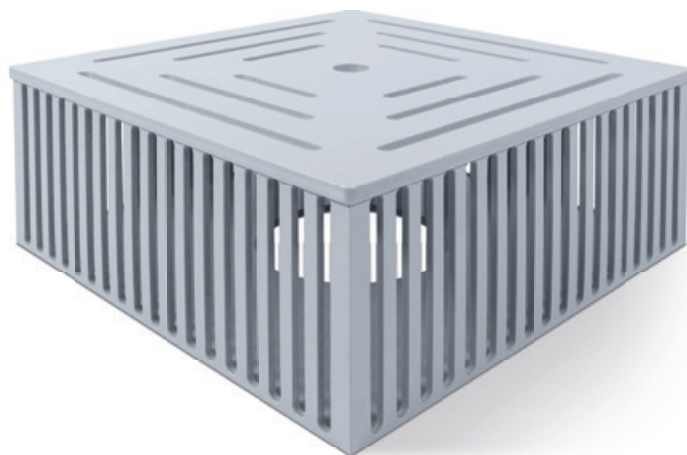

Top view, without lid

Technical data	
L	380 mm
B	380 mm
H	160 mm